

Hydrotech 89 Valve Softener Quick Set Up Manual

Step 1 - Inspection

Check to make sure you got everything supplied by factory and there is no visible or concealed damage. In case of missing items, please contact customer service immediately and have the Product Serial # handy. (Product Serial # can be found at the back of the control valve, see below)

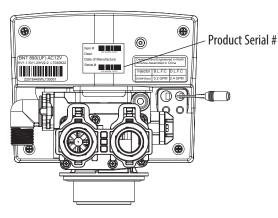



1. Tank with Media loaded Spill Cap D-Tube

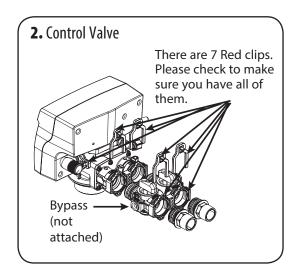


The items you will expect are:

- 1. Tank with Media loaded
- 2. Control Valve
- 3. Parts Kit
- 4. Brine Tank (Round or Square) and Components

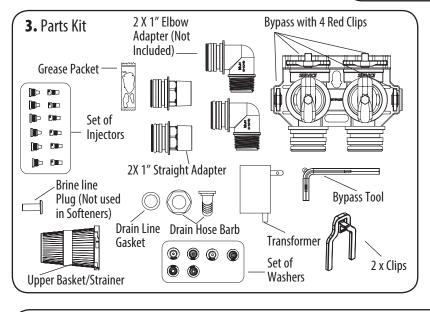


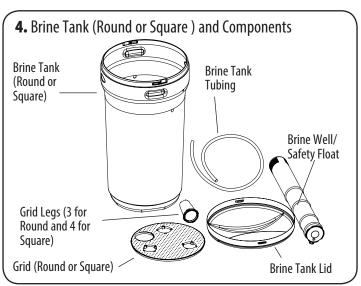

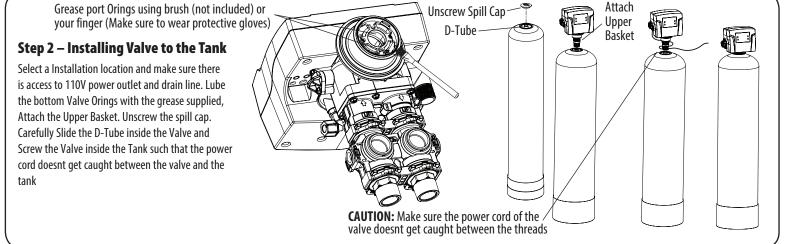


Step 3 – Assembling Brine Tank

a. Attach the three brine grid legs to grid plate. The legs will snap on to the tabs of the salt plate making a "click" sound. For square brine tank there are four legs.

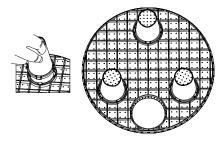


b. Insert the brine well assembly inside the grid plate as well below.

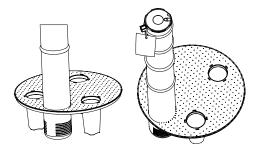



c. Drop the brine grid with brine well inside the brine tank such that the nut fitting faces the hole on the brine tank. Then press the grid evenly inside the brine tank until the brine grid legs touches the bottom of the brine tank.

 d. Take the brine tube and insert the nut and plastic sleeve as shown below.



 e. Insert the tube in the float assembly elbow and hand tighten the nut. In many cases the brine line already come installed from the factory. Leave the other end of the brine line tube inside the brine tank

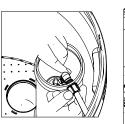





f. For installation of brine tank at the installation site, pull the other end of the brine tube from the hole on the brine tank. The completed assembly is shown below.




IMPORTANT: IN ROUND BRINE TANK, IT IS IMPORTANT TO ALIGN THE HANDLE TO THE BRINE WELL AS SHOWN

The hole in the brine tank should line up with the brine line as shown for round and square brine tank.

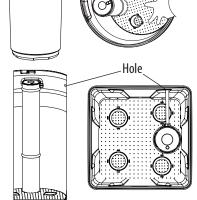

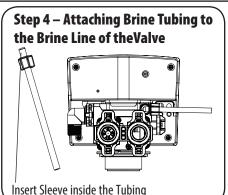

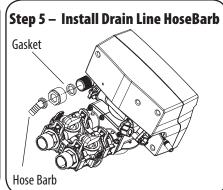

Step 6 - Power and Program the Valve

The below screen appears when the valve is powered

Press MENU key 🗆

Press + ♠ or - ▼ to change menu option. Press SET ■ to enter. Press Menu □ to Return

Press + ♠ or - ▼ to change value. Press SET to accept.



Flow Rate: 24.5 GPM 18-Apr-2015 10:35AM Remain: 1,280 GAL Capacity: 1,500 GAL





